


PuTTY

Just enter the IP address of your receiver into the Host Name box and set the connection type and port as below.

You can get your IP address from **MENU > INFORMATION > NETWORK** or by logging into your router.

If you want to save your settings just enter the name of your receiver in the box under Saved Sessions and click the save button.

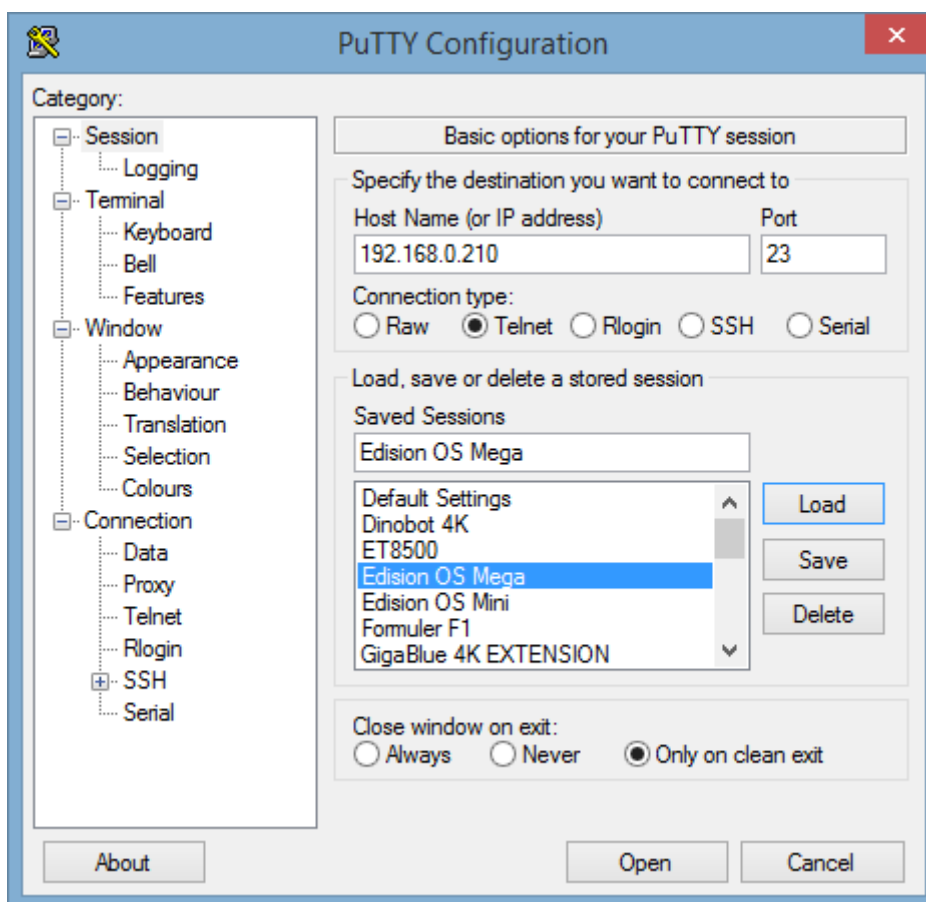

Press the open button and a terminal window will open.

Enter **root** (all lower case) and press enter.

Copy the script from the WilloBuild homepage and right click in the terminal window to paste.

Press enter and the script will start the flashing process.